

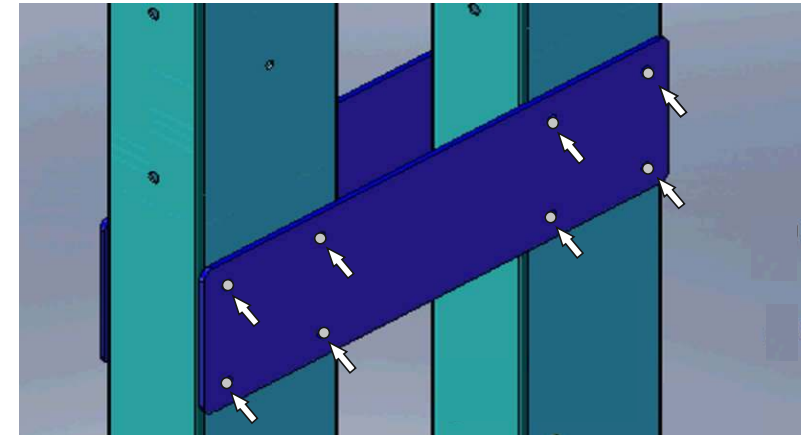



CONNECTION OF Y JOINT

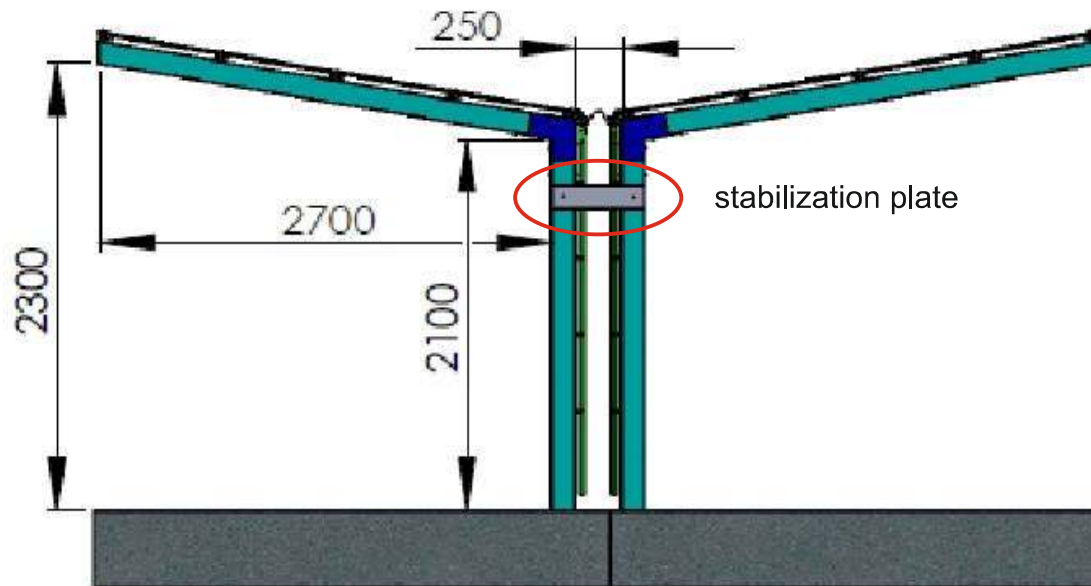

After the correct installation of carports, place the side stabilization plate and drill with a drill bit of 9 mm from both side.

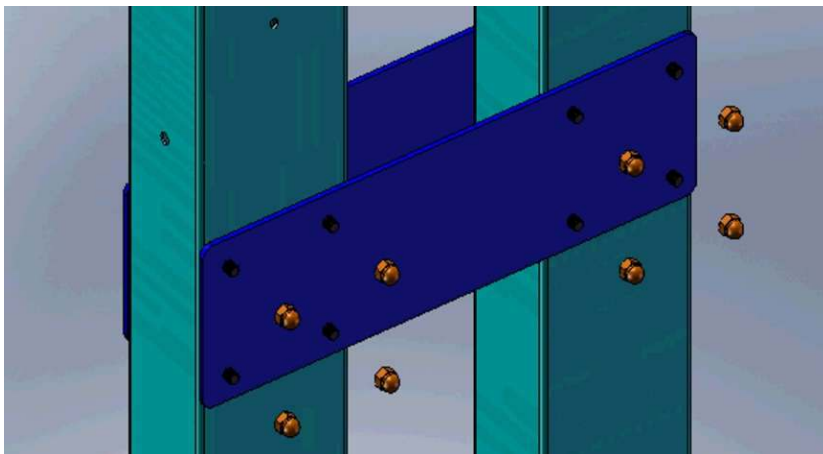

Place the screws to the holes and tighten the nut form both side

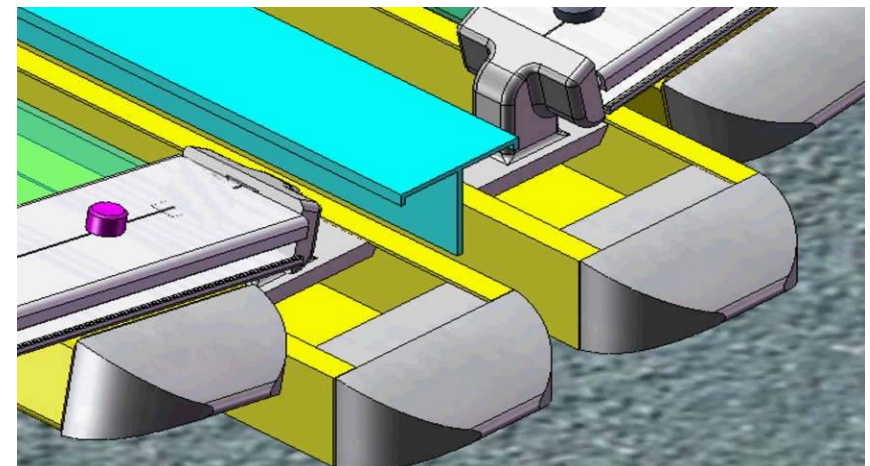

Place the T profile between the rain gutter